

| NO. | Part name             | Qty |
|-----|-----------------------|-----|
| 1   | Lens                  | 1   |
| 2   | Front covering        | 1   |
| 3   | Speaker driver        | 2   |
| 4   | Front inner shell     | 1   |
| 5   | Foot mat              | 2   |
| 6   | Bottom wood panel     | 1   |
| 7   | Battery               | 1   |
| 8   | Bottom cover          | 1   |
| 9   | Battery switching PCB | 1   |
| 10  | Loewe Logo            | 1   |
| 11  | Radiator              | 1   |
| 12  | USB PCB               | 1   |
| 13  | Back inner shell      | 1   |
| 14  | Back covering         | 1   |
| 15  | Antenna               | 1   |
| 16  | Antenna seal cover    | 1   |
| 17  | Knob                  | 1   |
| 18  | Top wood panel        | 1   |
| 19  | Upper cover           | 1   |
| 20  | Button PCB            | 1   |
| 21  | Main PCB              | 1   |
| 22  | Display bracket       | 1   |
| 23  | LCD display           | 1   |

## Loewe DAB EXPLOSIVE VIEW

