


Disassembly stellar 97

(Stand: 26.06.2025)


	method	size	quantity
●	screw	T10	4
●	screw	T20	4

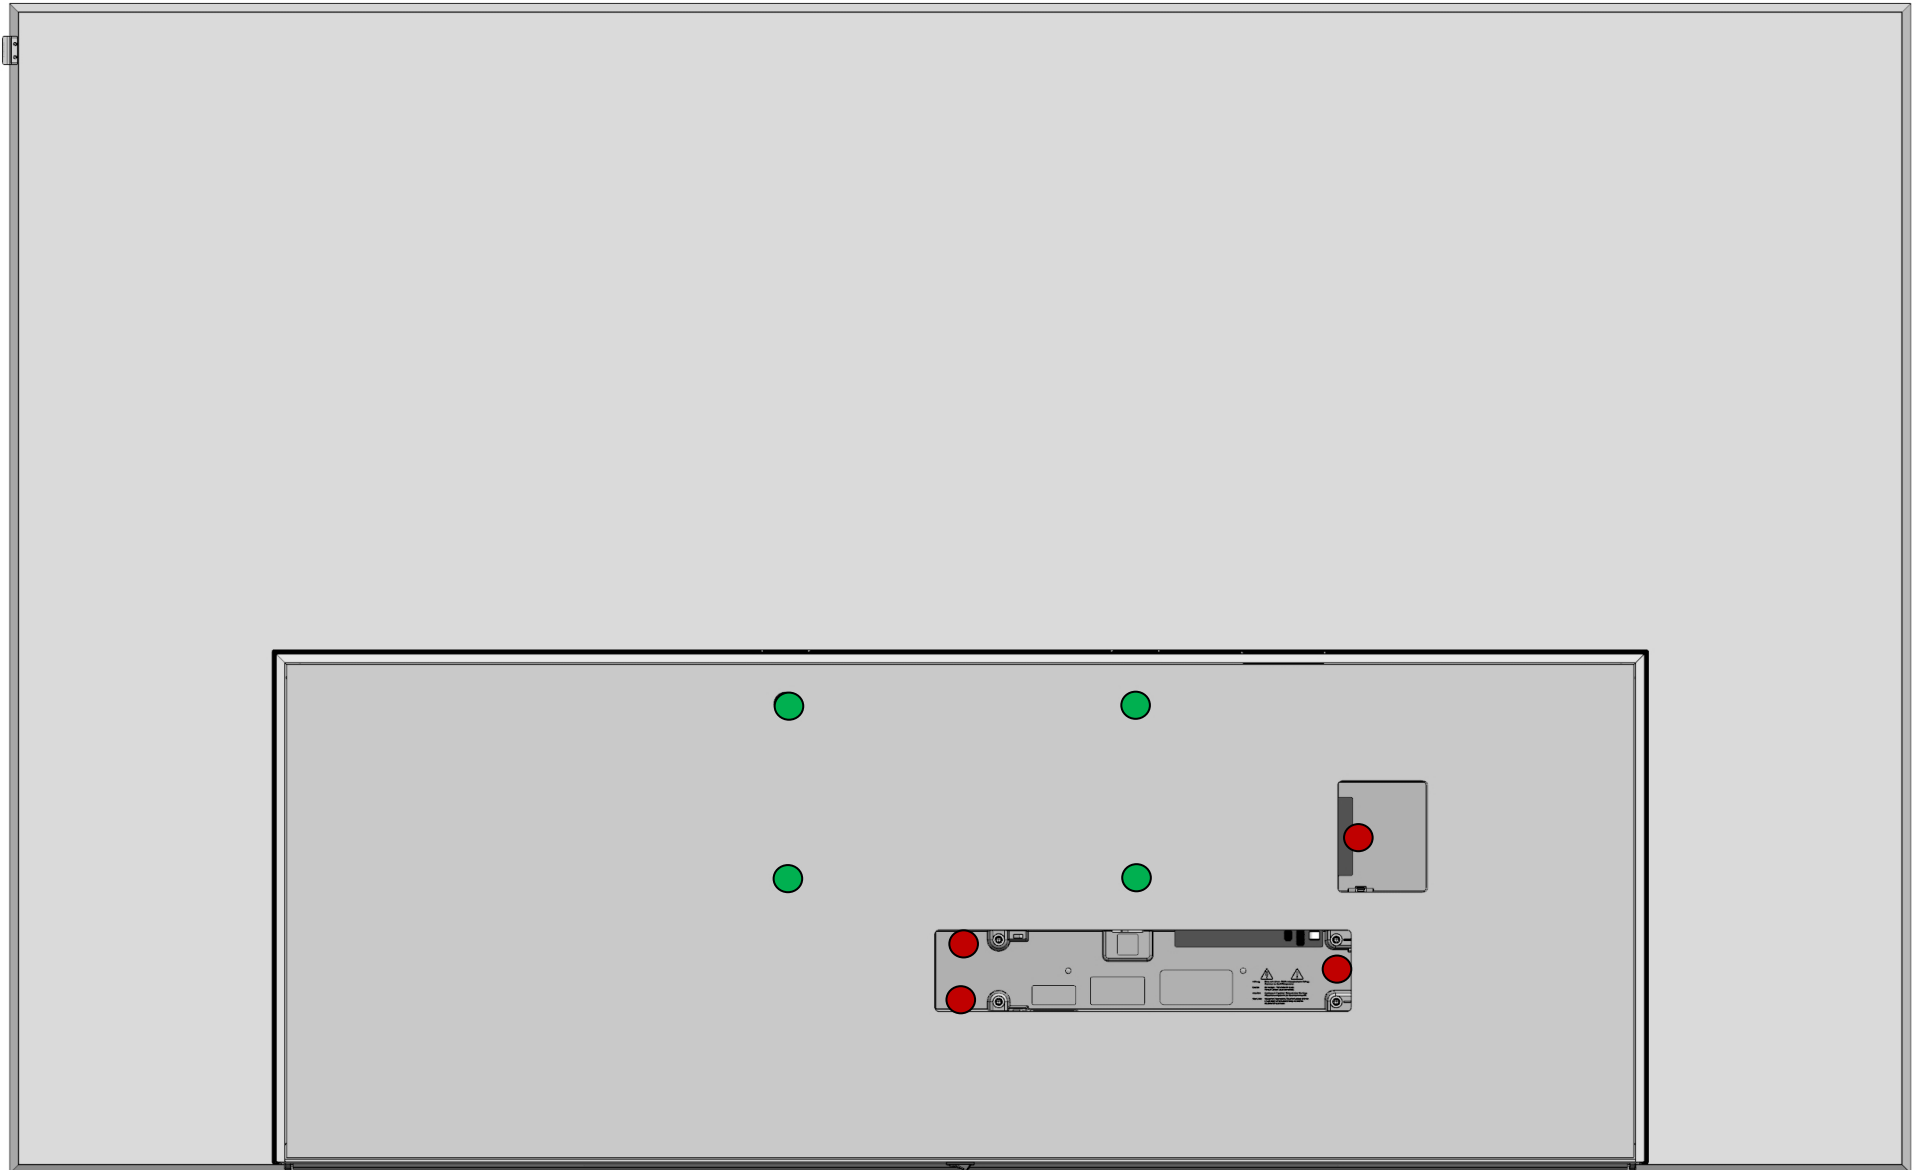

Disassembly stellar 97

(Stand: 26.06.2025)


	method	size	quantity
	screw	T20	24

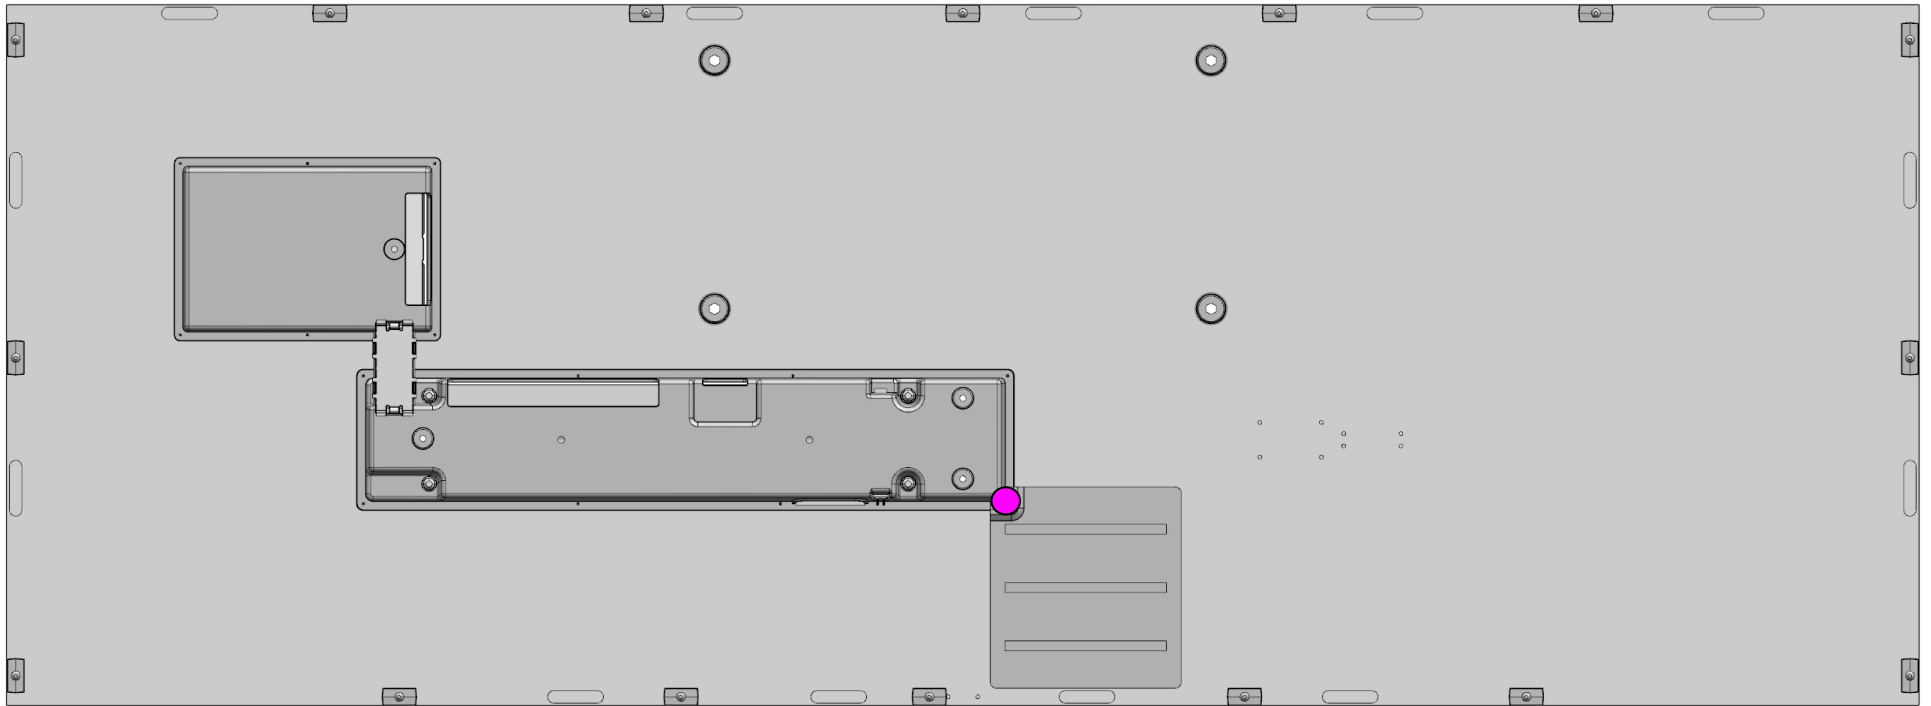

Disassembly stellar 97

(Stand: 26.06.2025)


	method	size	quantity
●	screw	T20	6
●	screw	T10	10
●	screw	15IP	6

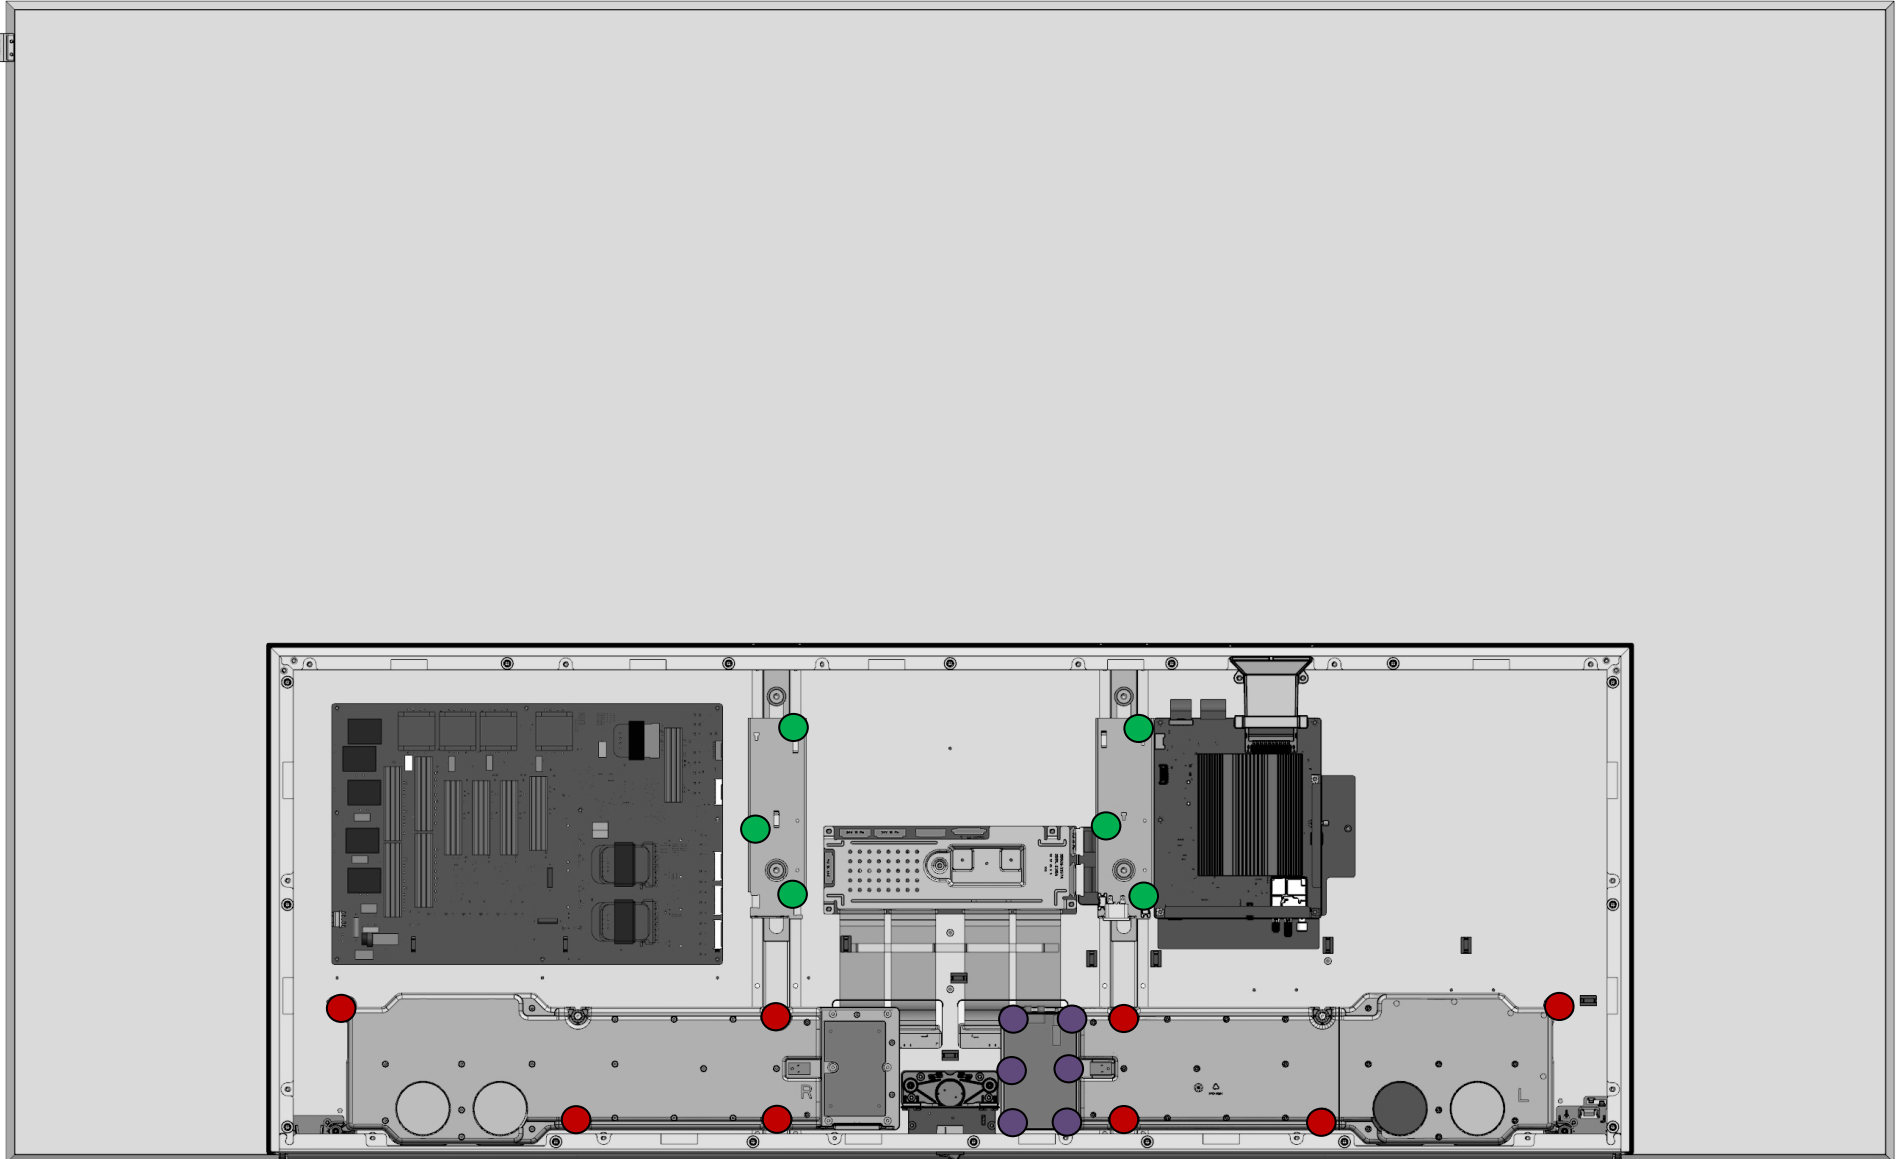

Disassembly stellar 97

(Stand: 26.06.2025)


	method	size	quantity
●	screw	T20	24

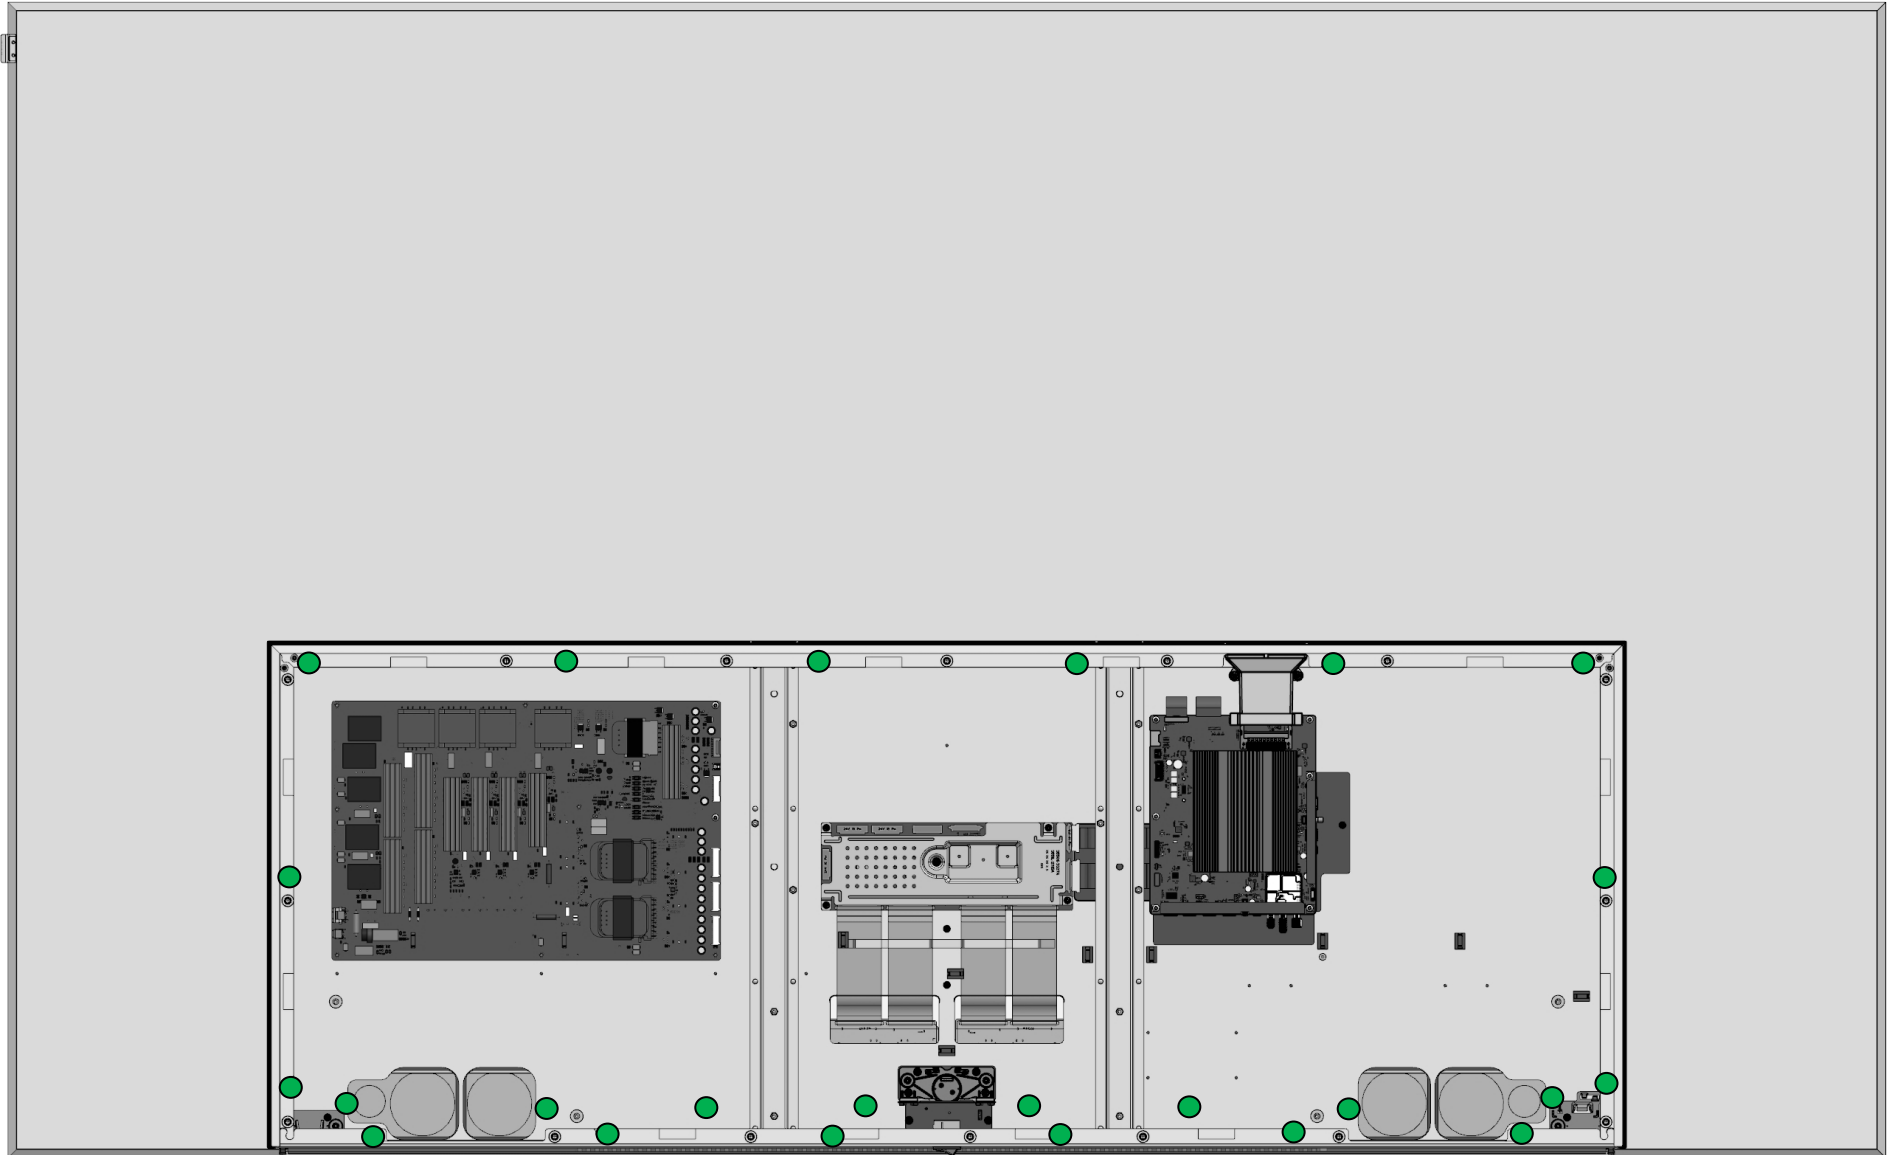

Disassembly stellar 97

(Stand: 26.06.2025)


	method	size	quantity
●	screw	T20	4

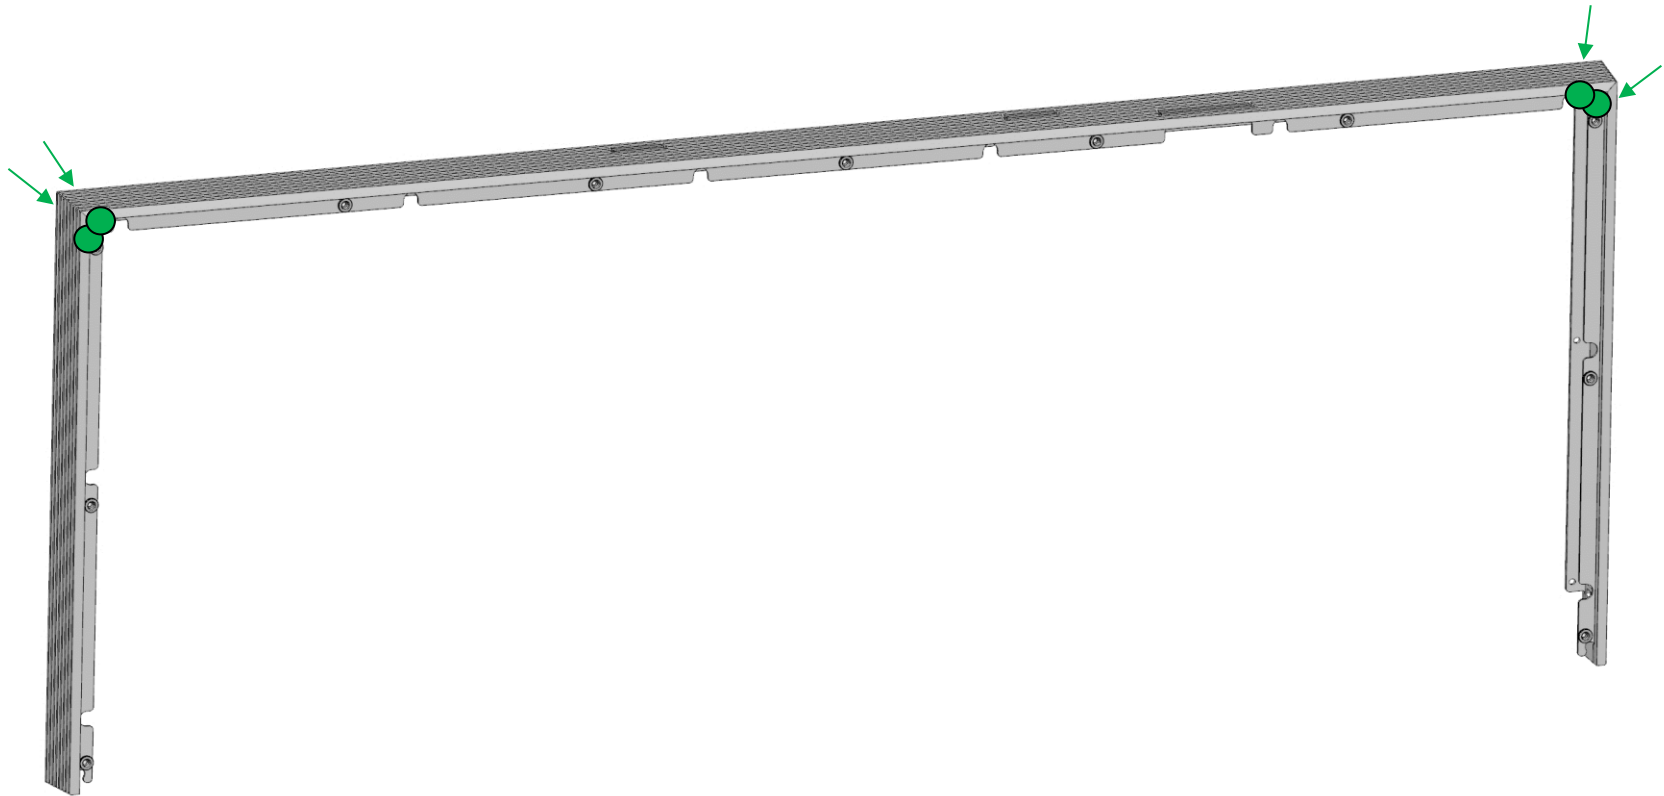

Disassembly stellar 97

(Stand: 26.06.2025)

	method	size	quantity
●	screw	T20	21
●	screw	T10	13
●	screw	TX6	2

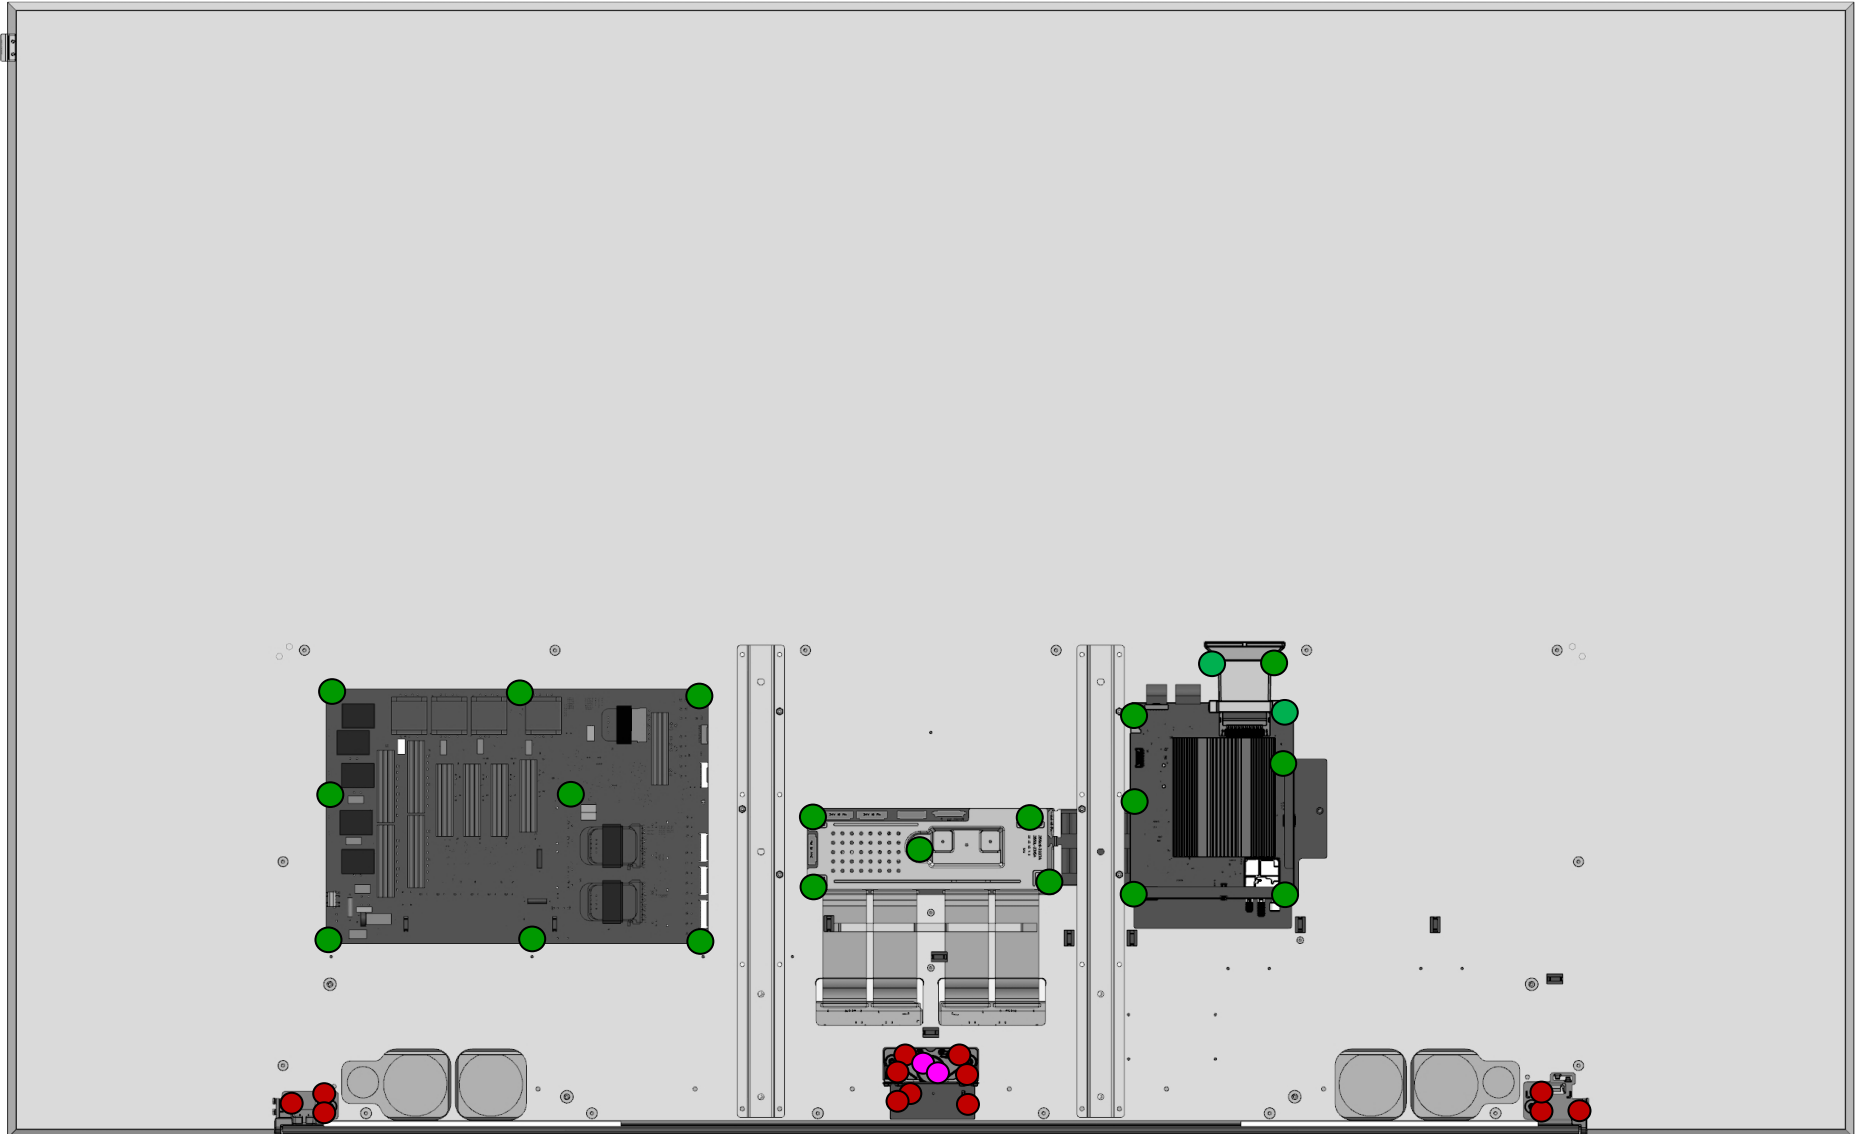

Disassembly stellar 97

(Stand: 26.06.2025)

	method	size	quantity
●	screw	T10	2

