

Disassembly instruction-We. HEAR pro

Step 1: With a thin piece of plasticsee to remove the fabric cover

1)Tool prepared



2)Firstly,using the end of one thin piece of plasticsee to pry open one end of the fabric cover,see the following pictures



Secondly,keep the same steps,using the end of one thin piece of plasticsee to pry open another end of the fabric cover,see the following pictures




Step 2: Opened the fabric cover




Step 3: Remove the battery cover screw and take out the battery cover

Take out the PA2x8 screws from the corresponding 6 screw holes in the main shell with an electric batch, and then take out the battery cover as shown in following pictures

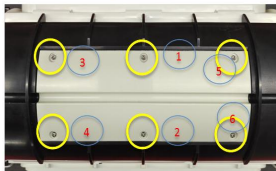

Step 4:Take out one end of the battery-free cable, and then take out the battery cable from the 3P socket of the battery connection board in the main housing, and then take out the battery

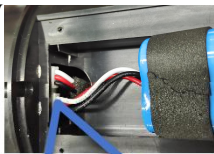

take out the battery